

GPON HGU with 4-Port GbE, 1200Mbps 802.11AC Wireless and 2-Port FXS

▶ GPN-400ACV



1. Package Contents

Thank you for choosing PLANET GPN-400ACV. Before installing the router, please verify the following items in the package box.

GPON Wi-Fi ONU

Quick Guide

12V DC, 1A Power Adapter




If there is any item missing or damaged, please contact the seller immediately.

- 1 -

2. Hardware Introduction

Front View

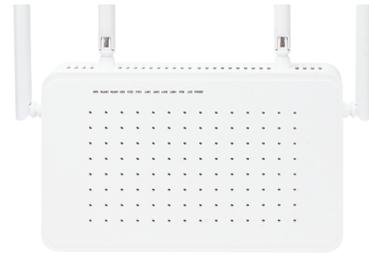

3. Hardware Installation


Step 1: Connect the Power Adapter provided in the package to the GPN-400ACV. The Power LED on the front panel will turn on accordingly.



- 2 -

3. Hardware Installation

Step 2: Follow the figure below to connect the network devices.

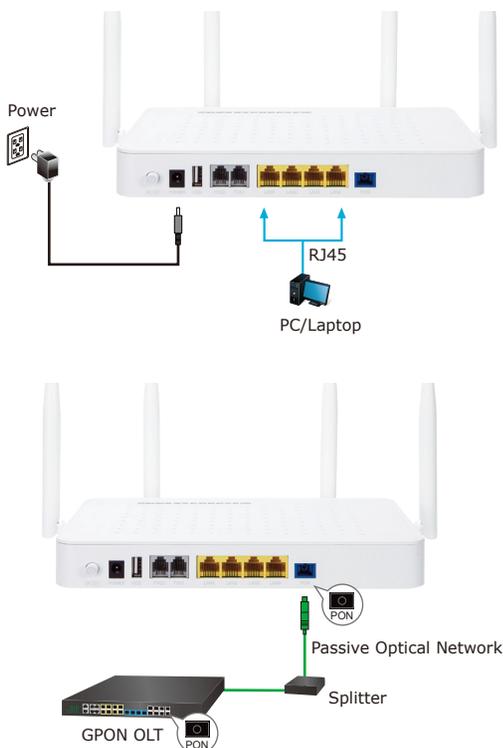


- 3 -

4. Network Configuration (Windows 10)

A computer with a wired Ethernet connection is required for the first-time configuration of the Wireless Router.

1. Click the **"Start"** button located at the lower-left corner of your computer.
2. Click **"Settings"**.
3. Double-click the **"Network & Internet"** icon.
4. Click **"Change Adapter Options"**.
5. **Double-click "Local Area Connectio"**.
6. Select **"Internet Protocol Version 4 (TCP/IPv4)"** and click **"Properties"**.
7. Select **"Obtain an IP Address automatically"** and **"Obtain DNS Server Address automatically"**, and then click the **"OK"** button twice to save the configuration.

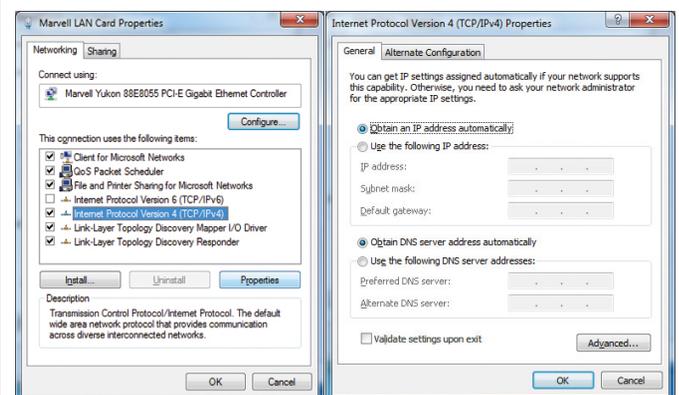

- 4 -

5. Enter into the Web Management

Default IP Address: **10.0.0.10**

Default User Name: **user**

Default Password: **123456**

Administrator User Name: **admin**

Administrator Password: **super&123**


Default 2.4G SSID: **HGU_XXXX**
 ("X" means the last 4 digits of the MAC address)

Default Wireless Encryption Type: **XXXX**
 (Please refer to the label info on the backplane)

Default 2.4G SSID: **HGU5G_XXXX**
 ("X" means the last 4 digits of the MAC address)

Default Wireless Encryption Type: **XXXX**
 (Please refer to the label info on the backplane)

Step 1: The Web management allows you to access and manage the GPN-400ACV easily. Launch the Web browser and enter the default IP address <http://10.0.0.10>

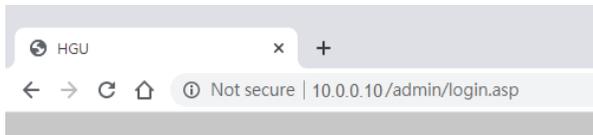


- 5 -

Step 2: When you enter into the Web User Interface, please enter the User Name and Password in the login window. Then click the "Login" button to continue.




Step 3: After you enter into the Web User Interface, please follow the indications on the screen to quickly set up for the Internet connection.

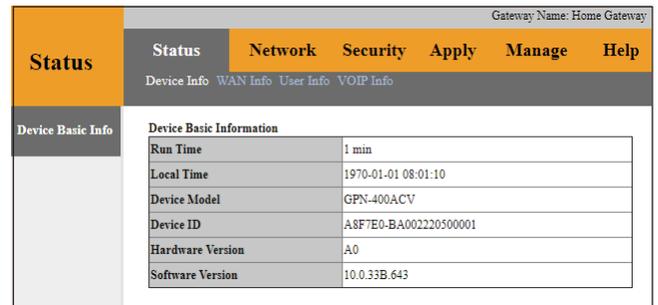


- 6 -

6. Wireless Network Connection

Step 1: Right-click on the **network icon** displayed in the system tray.

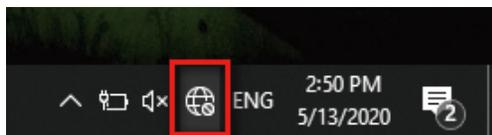


Step 2: Highlight the wireless network (SSID) to connect and click the [Connect] button.

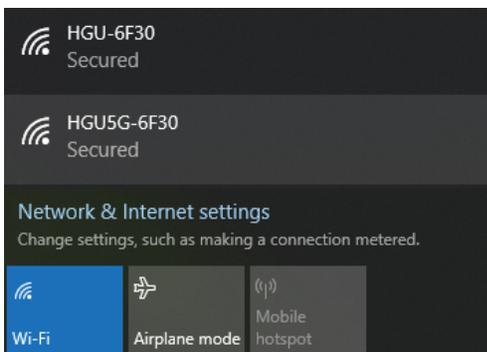

- 7 -

Step 3: Enter the **encryption key** of the GPN-400ACV.

Please refer to the label info on the backplane.

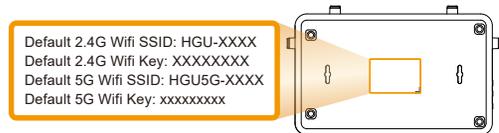

You have finally finished the configuration of the GPN-400ACV. Now you can use your smart phone, tablet, laptop or any other Wi-Fi device to connect with it wirelessly and start surfing the Internet.

Further Information

The above steps show the simple installation and configuration of the GPN-400ACV. For further configurations of WAN, LAN, Firewall, VoIP, DMZ, and DDNS, please refer to the user manual which can be downloaded from the website.



<https://www.planet.com.tw/en/support/downloads?&met hod=keyword&keyword=GPN-400ACV&view=3#list>

If you have further questions, please contact the local dealer or distributor where you purchased this product.

PLANET Technology Corp.

10F, No 96, Minquan Rd., Xindian Dist.,
 New Taipei City 231, Taiwan
 2011-BA0220-000



- 8 -